

Installation Guide Optiqo Qlvr Box

Optiqo Display

Thank you for choosing to work with us at Optiqo. Optiqo Display that consists of a transceiver with the EM 125 kHz frequency band, which is used without need for legal permission worldwide. We hope you will be pleased with the quality and characteristics of this product.

Initial start-up - WITHOUT PIR sensor:

Note: The Qlvr Box will connect to the closest cell tower at your location. However, it is important that the installation steps be regenerated at the exact location where the Qlvr Box is to be mounted in order to avoid having to redo the installation.

Step 1: Open the Qlvr Box with the key provided and install the batteries as required (6 x AA). If the batteries are already inserted, simply restart the unit by removing one of the batteries, wait 10 seconds and replace the battery. At the same time, check that the battery contact plates are in contact with all batteries and then install the locking clasp over the batteries.





Step 3: Make sure the Qlvr Box starts and connects. During this process, please refrain from scanning any cards as the reader will not be operational until fully configured.



Step 4: The Qlvr Box will configure automatically and upon completion, display the current time for about 8 seconds. After that, a beep will be heard, and the Qlvr Box will display the last employee card registration time.

Step 5: Scan a user card and ensure that the Qlvr Box displays the current time and date.

Step 6: Mount the Qlvr Box on the wall (see the Manual for further instructions).

Initial start-up - WITH PIR sensor

Note: The Qlvr Box will connect to the closest cell tower at your location. However, it is important that the installation steps be regenerated at the exact location where the Qlvr Box is to be mounted in order to avoid having to redo the installation.

Step 1: Open the Qlvr Box with the key provided and install the batteries as required (6 x AA). If the batteries are already inserted, simply restart the unit by removing one of the batteries, wait 10 seconds and replace the battery. At the same time, check that the battery contact plates are in contact with all batteries and then install the locking clasp over the batteries.




Step 2: Verify that the signal strength is above >13 (see picture). If below, an external antenna may be required. Please contact Optiqo should you wish us to order on your behalf.



Step 3: Make sure the Qlvr Box starts and connects. During this process, please refrain from scanning any cards as the reader will not be operational until fully configured.



Make sure that the PIR sensor mounted at the lower left corner of the Qlvr Box lights up red at the beginning of the booting process. It is most easily visible by looking through the monitor below the Qlvr Box, just to the left of the lock.

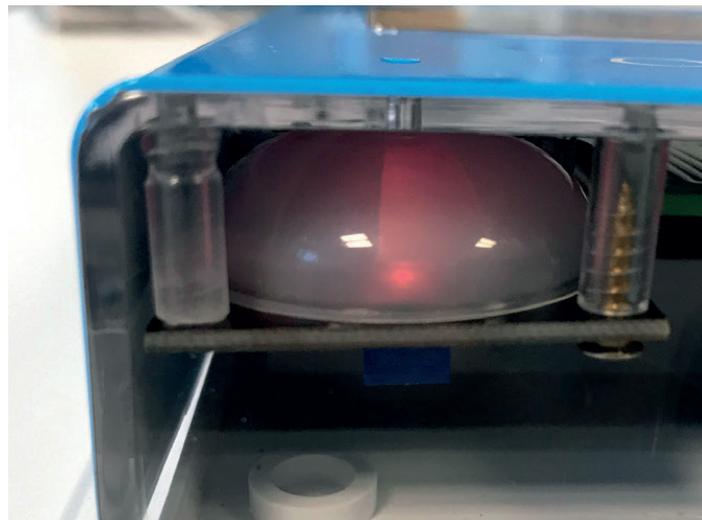

Step 4: The Qlvr Box will configure automatically and upon completion, display the current time for about 8 seconds. After that, a beep will be heard, and the Qlvr Box will display the last employee card registration time.

Step 5: Scan a user card and ensure that the Qlvr Box displays the current time and date.